


# HOW TO INSTALL NEPTUNE TRIDECK FLOORING

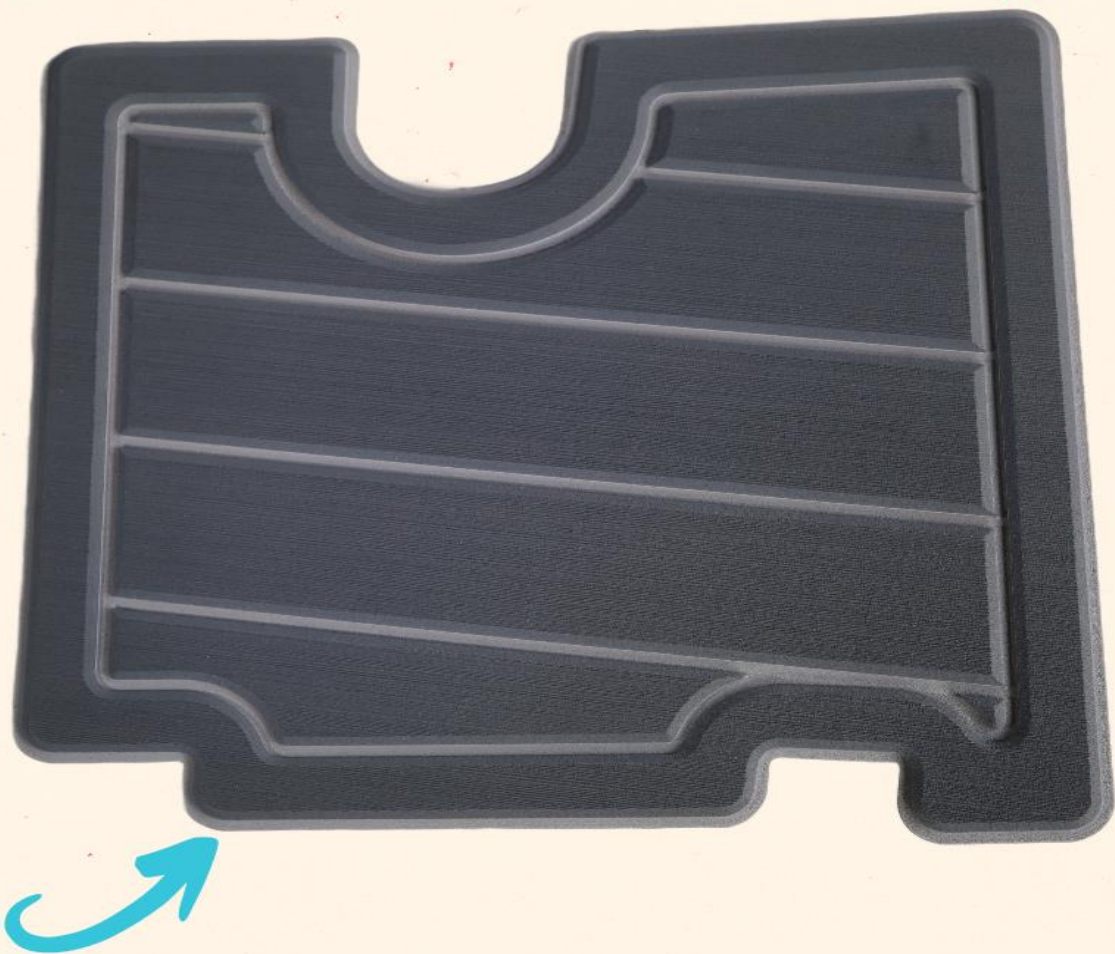

**NEPTUNE BOAT  
FLOORING  
INSTALLATION GUIDE**

**GATHER ALL THE TOOLS  
YOU'LL NEED INCLUDING:**

**A SHARP RAZOR KNIFE, SUCH  
AS A STANLEY RETRACTABLE  
BLADE KNIFE  
RAGS FOR CLEANING  
CLEANING SOLUTIONS FOR  
REMOVING GREASE AND OILS  
E.G. ISOPROPYL ALCOHOL  
90% (PROPAN-2-OL) OR  
ACETONE (PROPAN-2-ONE)  
MASKING TAPE**

**REMOVAL OF ALL GREASE,  
OIL, WAX, OLD ADHESIVE,  
DIRT AND ANY OTHER  
CONTAMINANTS FROM THE  
SURFACE TO BE COVERED IS  
ESSENTIAL. APPLYING  
ACETONE WITH A CLEAN RAG  
IS HIGHLY EFFECTIVE FOR  
THIS. A SECOND CLEAN WITH  
A CLEAN RAG AND  
ISOPROPYL ALCOHOL WILL  
HELP TO REMOVE ANY  
REMAINING RESIDUES.**





## **STEP 1:**

**YOU WILL WANT TO CHECK  
THAT ALL THE FLOORING  
PADS FIT CORRECTLY IN  
THEIR ASSIGNED POSITIONS  
BEFORE YOU PEEL THE PAPER  
BACKING OFF.**

## STEP 2:

**ONCE YOU ARE SATISFIED WITH THE FLOORING PAD PLACEMENT, TURN THE FIRST PAD OVER. USING A SHARP KNIFE, CUT THE BACKING PAPER IN A STRAIGHT LINE FROM THE CENTRE TO THE OUTSIDE EDGE.**

**REPEAT IN THE OPPOSITE DIRECTION SO YOU HAVE A SINGLE STRAIGHT CUT FROM ONE SIDE OF THE PAD TO THE OTHER. CUT ONLY THE BACKING PAPER—TAKE CARE TO AVOID CUTTING INTO THE FLOORING PAD ITSELF.**


**CUTTING THE PAPER IN THIS WAY WILL ALLOW YOU TO PEEL IT OFF WITHOUT ANY RIPPING.**



### **STEP 3:**

**STARTING FROM THE CENTRE CUT, PEEL BACK AROUND 5CMS OF THE PAPER, FOLD FOR A FIRM CREASE. REPEAT ON THE OTHER SIDE OF THE CUT LINE.**

**THIS STEP WILL MAKE IT EASIER TO PEEL THE PAPER BACK WITHOUT DISTURBING THE FLOORING PAD ALIGNMENT. NOW FOLD BOTH CREASED SECTIONS BACK INTO PLACE OVER THE ADHESIVE.**

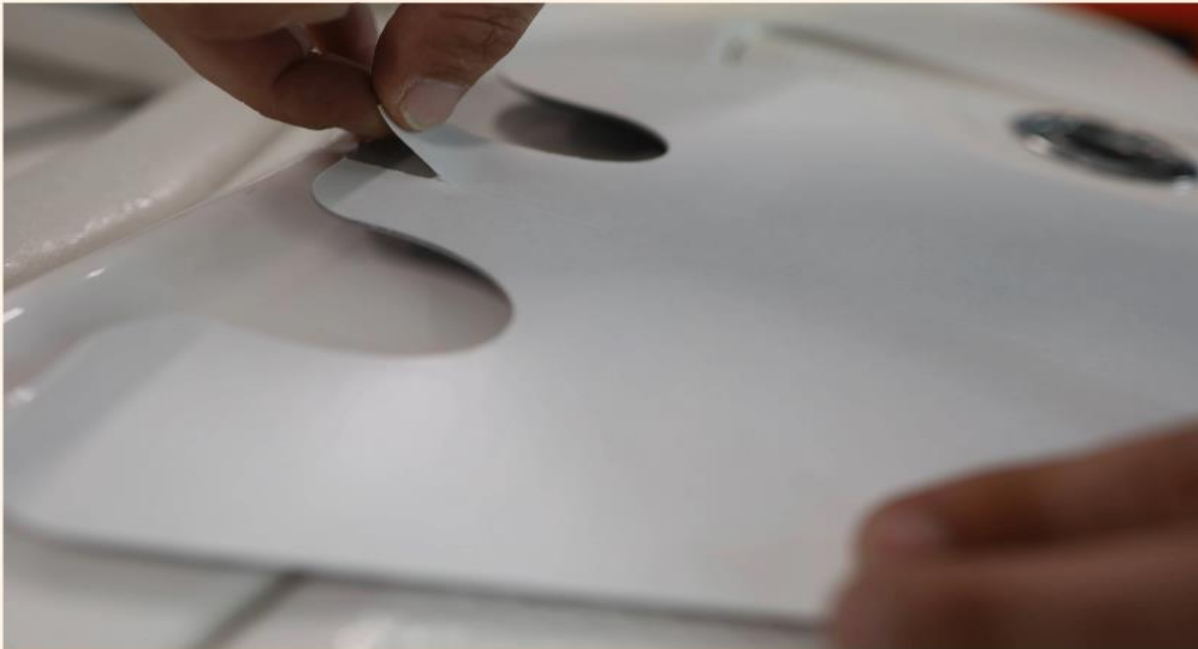



## **STEP 4:**

**TURN THE FLOORING PAD RIGHT WAY UP AND PLACE INTO THE CORRECT POSITION.**

**APPLY MASKING TAPE TO ONE SIDE SO THAT THE PAD IS HELD SECURELY IN PLACE AND WON'T MOVE.**



### **STEP 5:**

**GENTLY RAISE THE SIDE THAT IS NOT TAPED DOWN AND REMOVE THE FIRST 5CMS OF BACKING PAPER FROM THE CENTRE LINE BACK TO THE CREASE.**

**PRESS THE FLOORING PAD INTO PLACE PRESSING FIRMLY OVER THE AREA WHERE THE ADHESIVE IS EXPOSED.**

**WORK FROM THE CENTRE TO THE OUTER EDGES (ALONG THE LINE YOU CUT IN THE BACKING PAPER) PRESSING FIRMLY TO REMOVE ANY AIR BUBBLES.**



## STEP 6:

**REPEAT STEP 5, REMOVING ANOTHER 5CMS OF BACKING PAPER EACH TIME AND TAKING CARE TO REMOVE ANY TRAPPED AIR AND ENSURE A GOOD SEAL.**



## STEP 7:

**ONCE YOU HAVE COMPLETED THE FIRST SIDE, REMOVE THE MASKING TAPE AND REPEAT THE PROCESS WITH THE SECOND HALF OF THE FLOORING PAD.**





**STEP 8:**

**CONTINUE THIS PROCESS  
WITH ALL THE FLOORING  
PADS.**





**Neptune**  
BOAT FLOORING